



UNIVERSAL TRAILER HITCH/ UNIVERSAL GRAB BAR

INSTALLATION INSTRUCTIONS



Trailer Hitch



Grab Bar

**If installing a Hitch + Grab Bar skip to Step 3.*


**If installing a Grab Bar only, skip to Step 6.*



Tool Needed: 13mm Socket or Wrench


To install the **Hitch** only to the Footrest, attach the supplied **90° Brackets** to **Hitch** using the inside holes using the 8x25mm hardware. Bracket should face each other as shown.


*If installing this product with a **Rear Grab Bar**, skip to Step 3.*

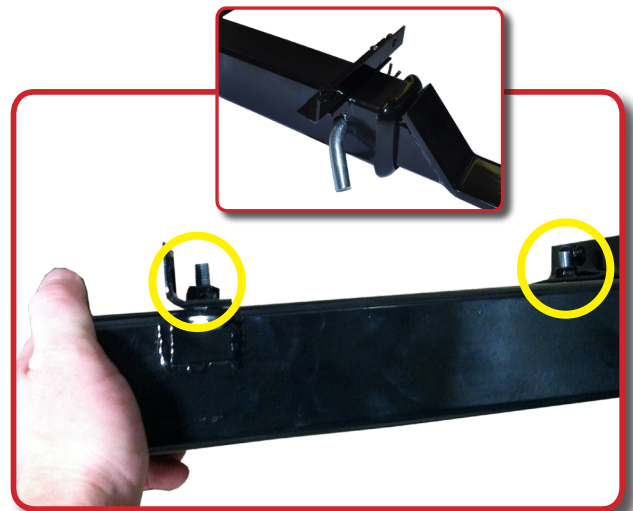

13mm Socket or Wrench

Using 8x40mm bolts & washers, attach **Hitch** to Footrest as shown.

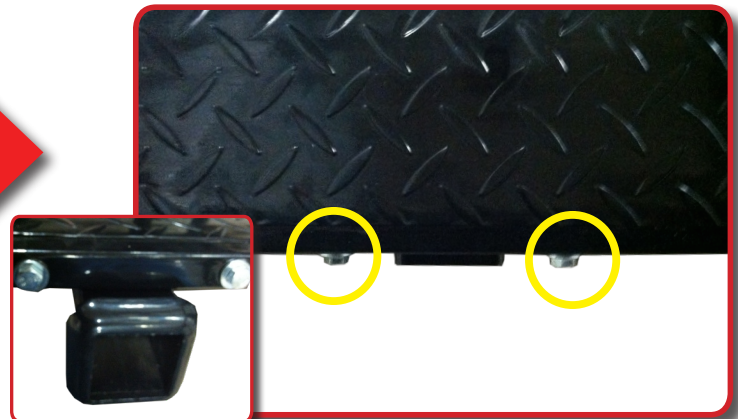

 13mm Socket or Wrench


When installing this product with a **Rear Grab Bar**, you will not use the mounting brackets from Step 1.

Attach **Hitch** to **Grab Bar** using 4 bolts as shown. Hand tighten bolts until all 4 bolts are in place, then tighten completely.




 13mm Socket or Wrench

Attach **Grab Bar & Hitch** to Footplate as shown, and tighten bolts once all four are started in the weld nuts of Grab Bar.

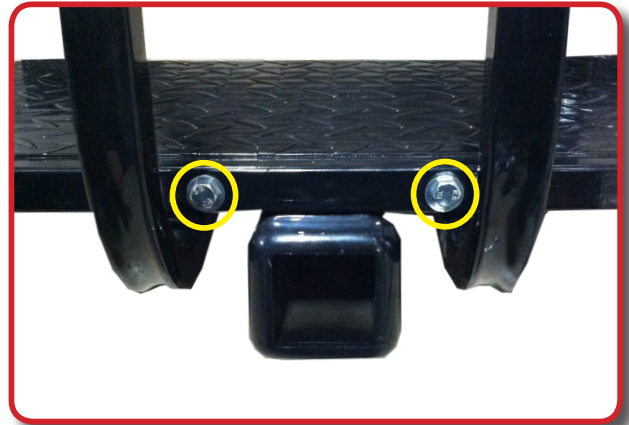

Attach receiver with supplied pin clip to complete installation.

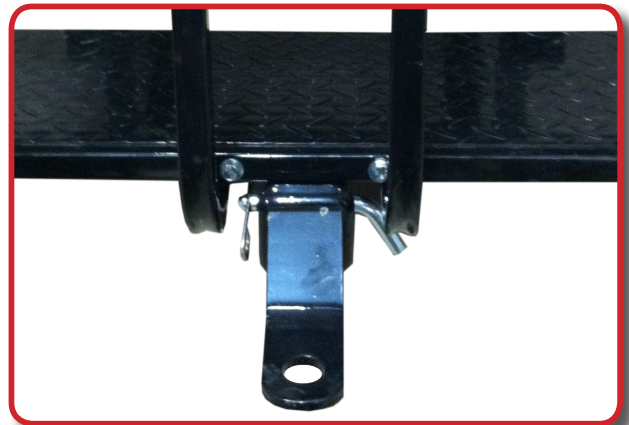


**Ball mount is not supplied with this kit.*

 13mm Socket or Wrench

If installing Grab Bar only:

Grab Bar comes with **90° Brackets** welded on. Attach Grab Bar to Footrest using hardware provided. Once all four bolts are started in **90° Brackets** weld nuts, then tighten.

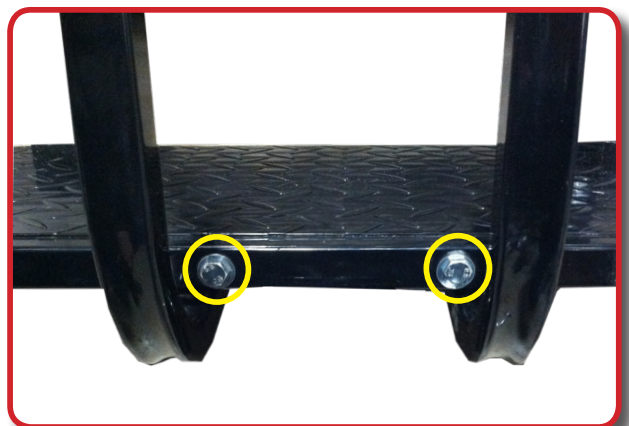

INSTALLATION COMPLETE