



BRUSH GUARD

WILL FIT E-Z-GO® TXT®
INSTALLATION INSTRUCTIONS

MJBG2000B (BLACK)

MJBG2000S (STAINLESS)

INCLUDED:


MADJAX BRUSHGUARD

(4) WASHERS



1

Remove bolts from windshield struts as shown. Retain all factory hardware.

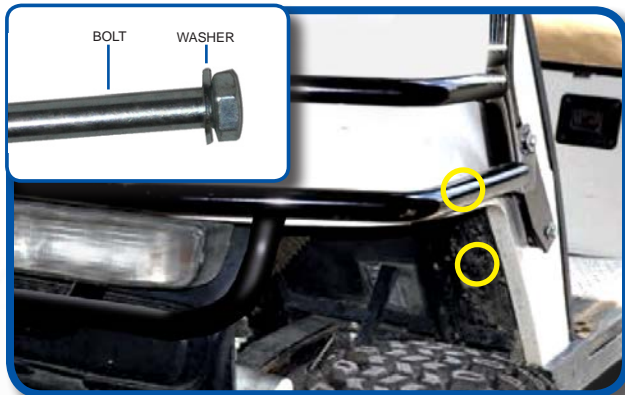

Assemble bolts retained from Step 1 and washers as shown. Attach brush guard to windshield struts and tighten bolts.

2

VISIT WWW.MYADJAX.COM FOR MORE INSTALLATION VIDEOS

E-Z-Go®, E-Z-Go® TXT®, and E-Z-Go® RXV® are registered trademarks of Textron Innovations, Inc. ("Textron"). Reference to E-Z-Go®, TXT®, or RXV® or any of Textron's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Textron or any of its subsidiary companies.